




Top view

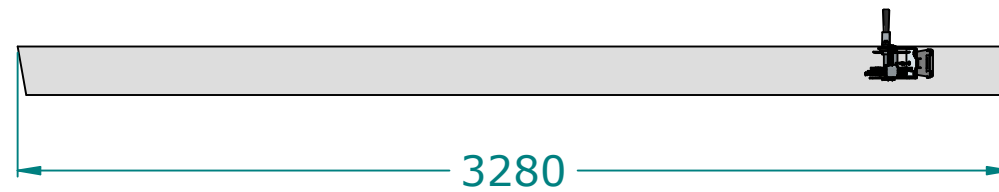

Height from the top of
the closed door to B6
Flat Stop sill level :

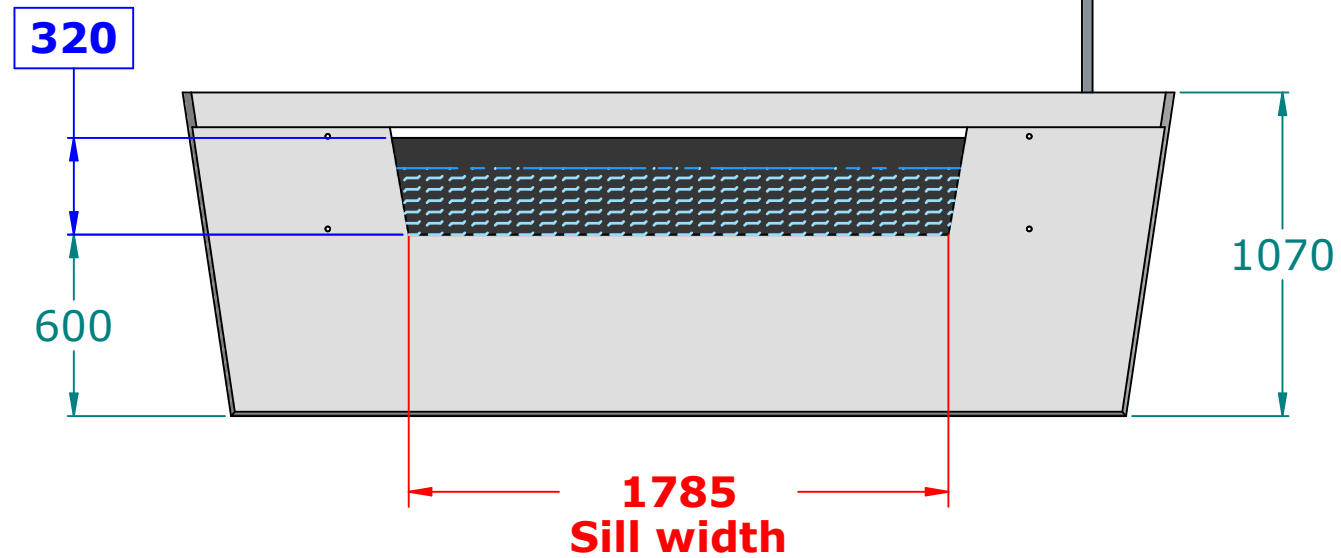

Upstream view

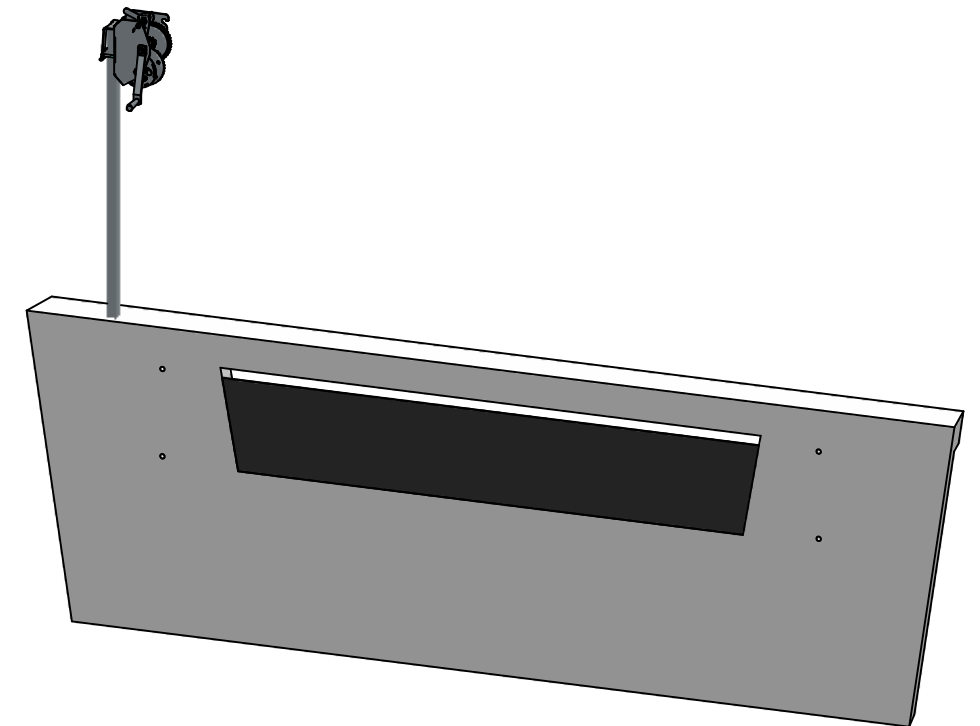

B6 Flat Stop - Assembly
General arrangement

- Recommended is 100mm of freeboard
on the upstream side of the rubber door.

B6 Flat Stop

© Padman Stops. This document is and shall remain the property of Padman Stops. Unauthorised use of this document in any form is prohibited. Patents may apply.

All dimensions in millimetres
unless otherwise stated.

info@padmanstops.com.au
tel. 03 5874 5282

