




Top view

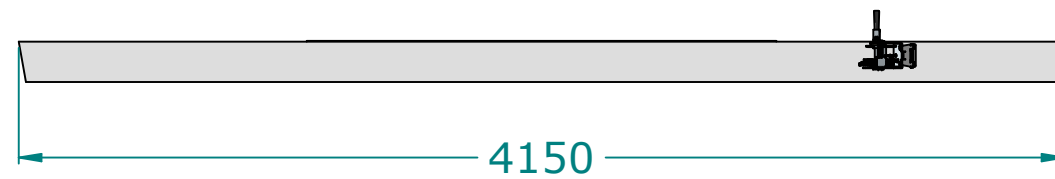

Height from the top of  
the closed door to D6  
Flat Stop sill level :

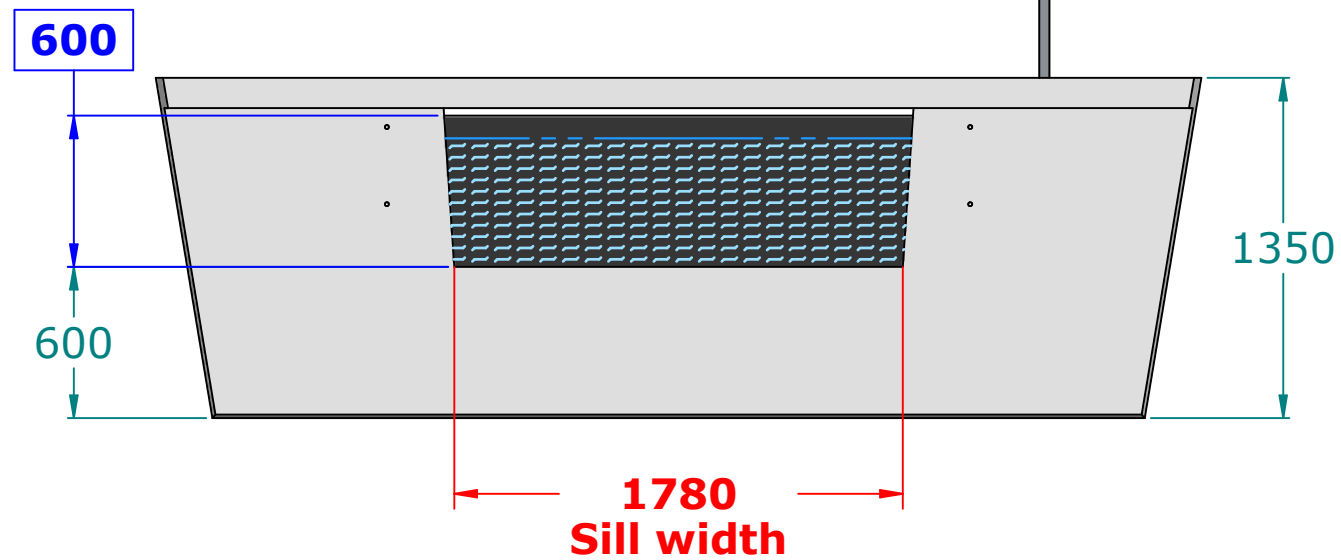

Upstream view

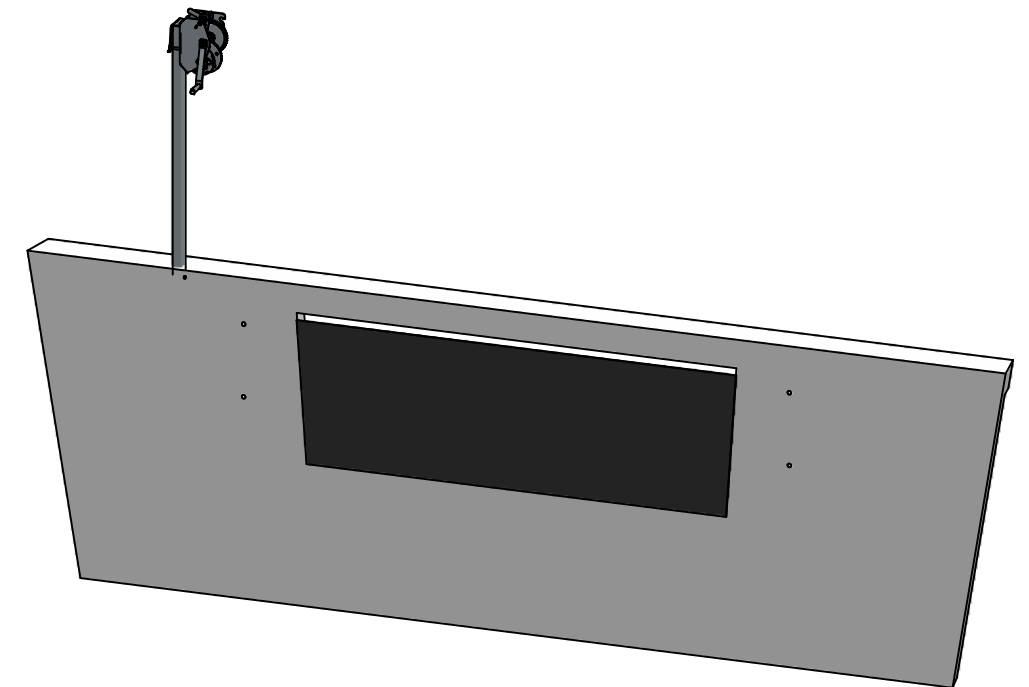

D6 Flat Stop - Assembly  
General arrangement

- Recommended is 100mm of freeboard  
on the upstream side of the rubber door.

## D6 Flat Stop

© Padman Stops. This document is and shall remain the property of Padman Stops. Unauthorised use of this document in any form is prohibited. Patents may apply.

All dimensions in millimetres  
unless otherwise stated.

[info@padmanstops.com.au](mailto:info@padmanstops.com.au)  
tel. 03 5874 5282

