



Height from the top of
the closed door to D8
Flat Stop sill level :

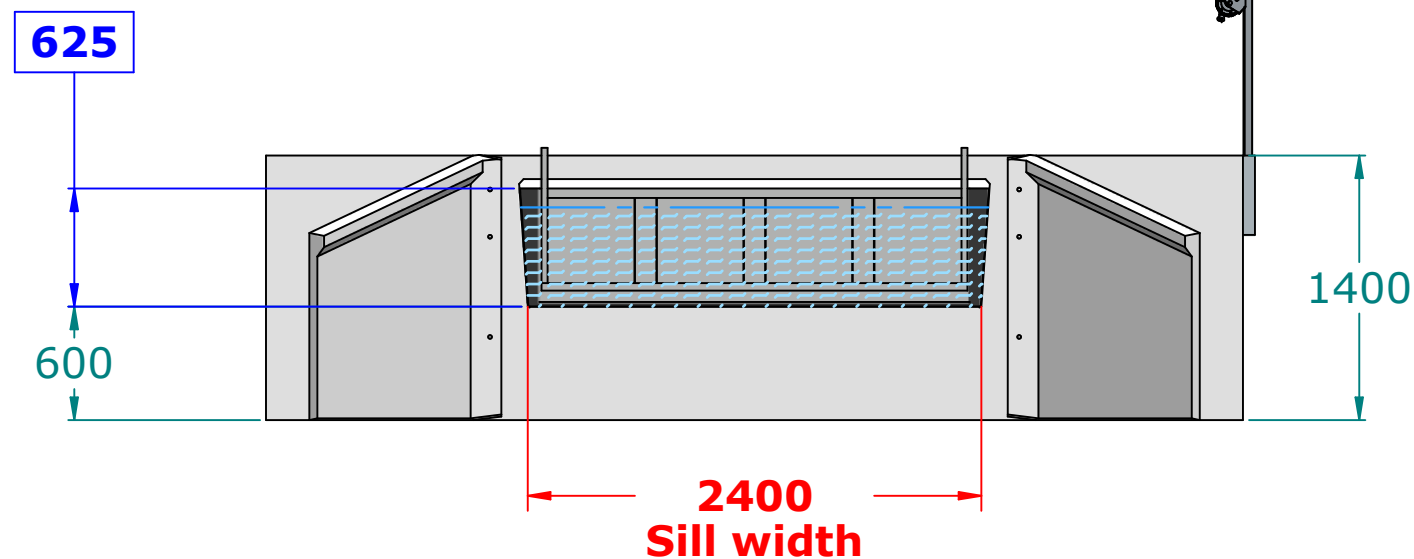

Downstream view

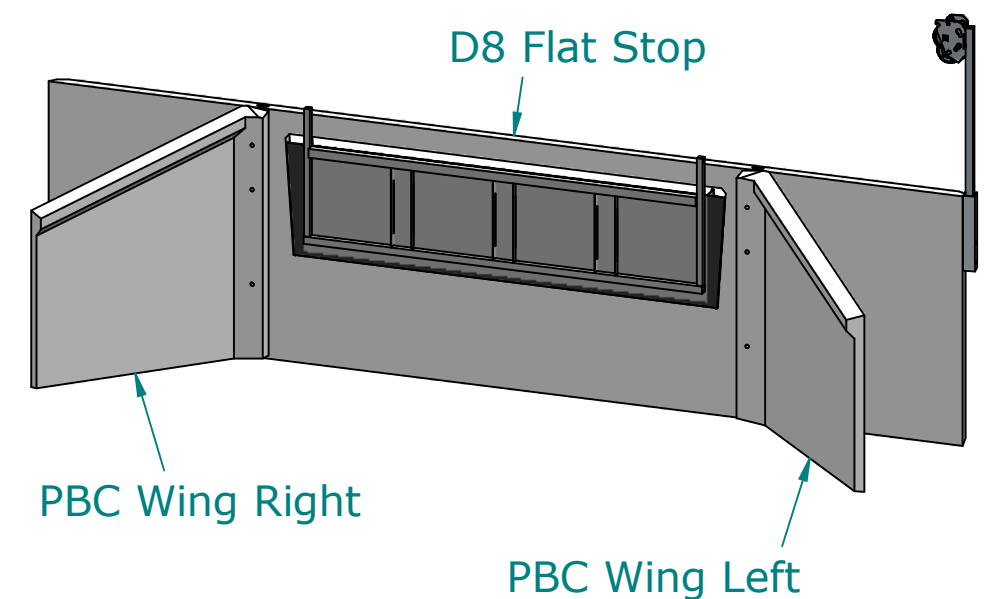

D8 Flat Stop - PBC Wings
General arrangement

- Recommended is 100mm of freeboard
on the upstream side of the rubber door.

D8 Flat Stop - PBC Wings

© Padman Stops. This document is and shall remain the property of Padman Stops. Unauthorised use of this document in any form is prohibited. Patents may apply.

All dimensions in millimetres
unless otherwise stated.

info@padmanstops.com.au
tel. 03 5874 5282

